



W600 Quick Programming Guide

Programming the W600 for cooling tower control

Conductivity sensor

Bleed and feed relays

Biocide addition

Flow switch to lockout controls when no flow

Setting your controller for HVAC mode.

1. From the Home screen, press Config
2. Select Global Settings
3. Press the DOWN arrow until HVAC Modes is highlighted.
4. Press Enabled, and then Check. ✓

Programming the Conductivity Sensor

1. From the Main Menu, press Inputs **Inputs**
2. Select the sensor input that the conductivity sensor is wired to
3. Press Configuration
4. Press the Down Arrow until Type is displayed
5. Press Type
6. Use the Down Arrow to select Contacting Conductivity, and press the Check ✓

Programming the relay for bleed

1. From the Main Menu, press Outputs **Outputs**
2. Choose the relay for the blowdown valve
3. Press Configuration
4. Press the Down Arrow until Mode
5. Press Mode and choose On/Off, and Check ✓
6. Press Configuration again
7. Press the Down Arrow until you see Input
8. Press Input, and then select the Conductivity sensor; press the Check ✓

You've now programmed the relay for the blowdown valve, and programmed the sensor, and assigned it to that relay.



Programming Inhibitor Feed

Outputs

1. From the main menu, press Outputs
2. Select the relay you want to use for the inhibitor feed pump
3. Press configuration 
4. Press the Down Arrow until you get to Mode
5. Choose the feed mode you want, and then check ✓
6. Press configuration again. 
7. If you set the mode for Bleed and Feed, or Bleed then Feed, press the Down Arrow until you get to Bleed
8. Press Bleed, and then select the relay that has been programmed for the bleed valve.
9. Press check ✓
10. Press Configuration, then HOA setting. Select Auto

Programming Biocide Additions

Outputs

1. From the main menu, press Outputs
2. Select the relay you want to use for the biocide pump.
3. Press Configuration 
4. Press the Down Arrow until you get to Mode
5. Select Biocide Timer, and Check ✓
6. Press Configuration 
7. Press Event 1
8. Screen should say Repetition None. Press this.
9. Using the Down arrow, you can choose Daily, 1 Week, 2 Week or 4 Week.
10. When you press Daily, you will be prompted to enter a Start Time, and the Duration. This event will repeat every day. If you want more than one event per day you can add additional events. Just press Event 2 to Event 10 to program. When you press 1 Week you will be prompted to enter a day of the week, start time and duration. Again, you can repeat this on events 2-10 if you want more events repeating every week. You can also enter events based on a 2 week and 4 week timer.
11. After the events have been programmed, you can press the down arrow to program a pre-bleed, bleed lockout, as well as interlocking other channels.

**Programming a flow-switch interlock (digital input)**

1. From the Main Menu press Inputs  **Inputs**
2. Press the Down arrow until you get to the desired digital input
3. Press the Configuration key 
4. Down Arrow until Type
5. Press Type, then DI state
6. Press Configuration again. In this menu you choose when to Interlock: Open or Closed. You can also choose a customer message for when the switch is open and closed.
7. In each relay menu, you can choose which inputs you want to interlock with.